Installation Instructions

for the
Keyboard Support Tray
(Caseworks)

TPW1727 Rev. B (10/99)

ASSEMBLY NOTES:

THE WORK SURFACE SHOULD HAVE A PREDRILLED 1/2 HOLE.
REMOVE THE COSMETIC PLUG FROM THE HOLE AND ASSEMBLE AS ILLUSTRATED.

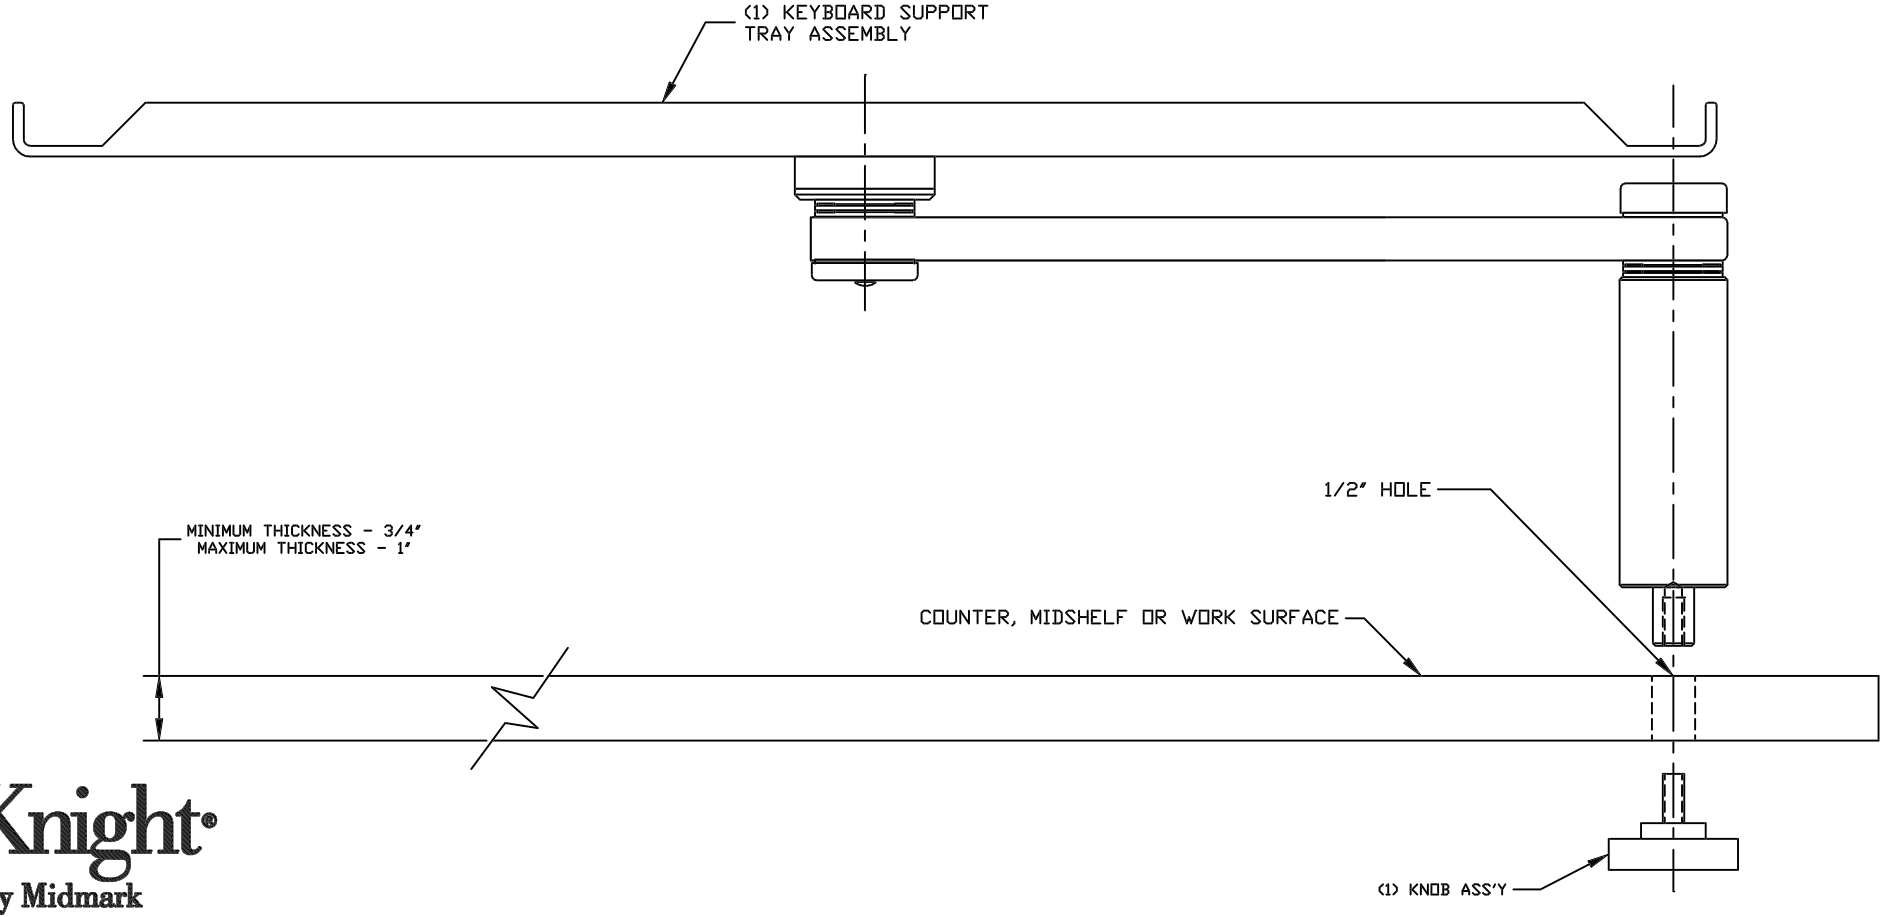

Knight®
by Midmark